


MOUNTING TEMPLATE FOR FLUSH MOUNTING THE DM3

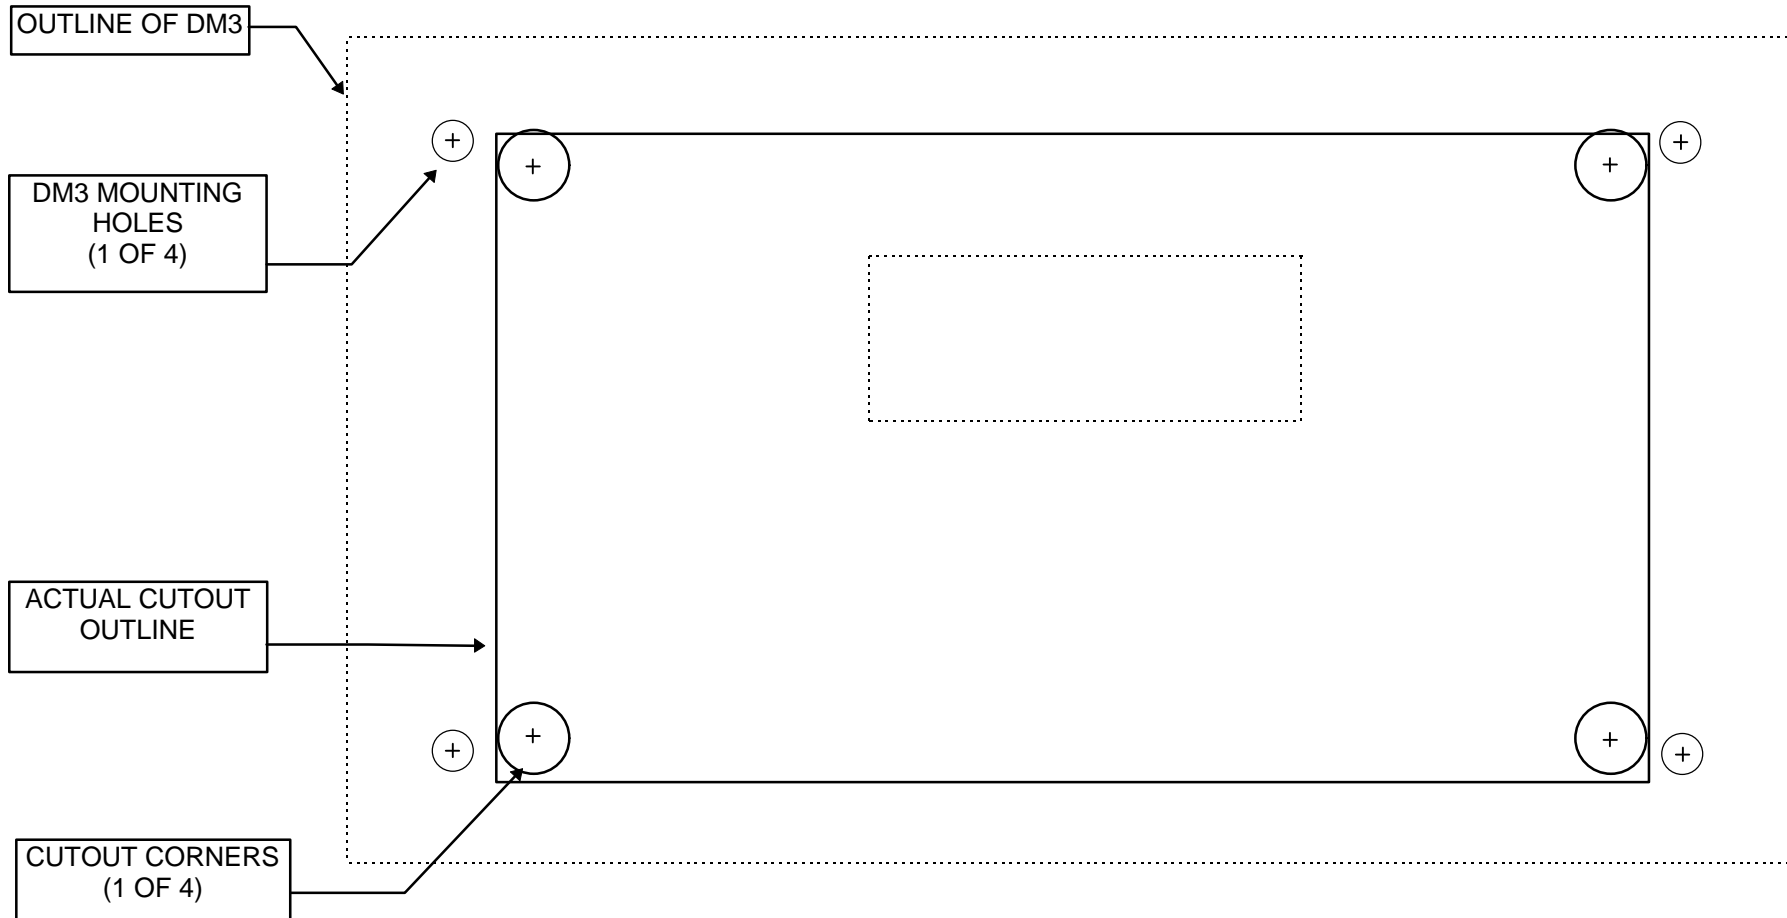

INSTALLATION STEPS

1. Tape template to surface where DM3 is to be installed. Make sure it is straight.
2. Punch all holes (8 total) with a nail or awl.
3. Remove template.
4. Connect punch-marks for cutout corners with pencil line.
5. Drill cutout holes with 3/8 inch drill.
6. Use a suitable saw to cut along pencil line.
7. Mount the DM3 to wall using appropriate fasteners, after electrical connection .